

# PA PERGOLA DETAILS




ATTENTION: VERIFY ALL BUILDING PRACTICES WITH LOCAL BUILDING DEPARTMENTS.  
DECKS.COM LLC ENCOURAGES THE USE OF THIS DETAIL FOR EDUCATIONAL PURPOSES.  
DECKS.COM LLC GRANTS PERMISSION TO REPRODUCE THIS DOCUMENT. HOWEVER  
EDITING THE DOCUMENT IS STRICTLY PROHIBITED.

DATE: 11-20-2009

© DECKS.COM LLC

- STEP 1: DIG (4) MINIMUM 42" DEEP HOLES, FILL BOTTOM WITH MINIMUM 6" CONCRETE, SET 6x6 POST 36" IN CONCRETE
- STEP 2: CUT HEADER & RAFTER TAILS (SEE PROFILE DETAIL)
- STEP 3: INSTALL HEADER INTO TOP OF NOTCHED 6x6 WITH (2) 1/2" CARRIAGE BOLTS
- STEP 4: INSTALL NOTCHED RAFTER OVER HEADER WITH (4) 3-1/2" SCREWS INSTALLED ON AN ANGLE
- STEP 5: INSTALL 2x2 CANOPY WITH (1) 2-1/2" SCREW PER RAFTER INTERSECTION

## POST / FOOTING DETAIL

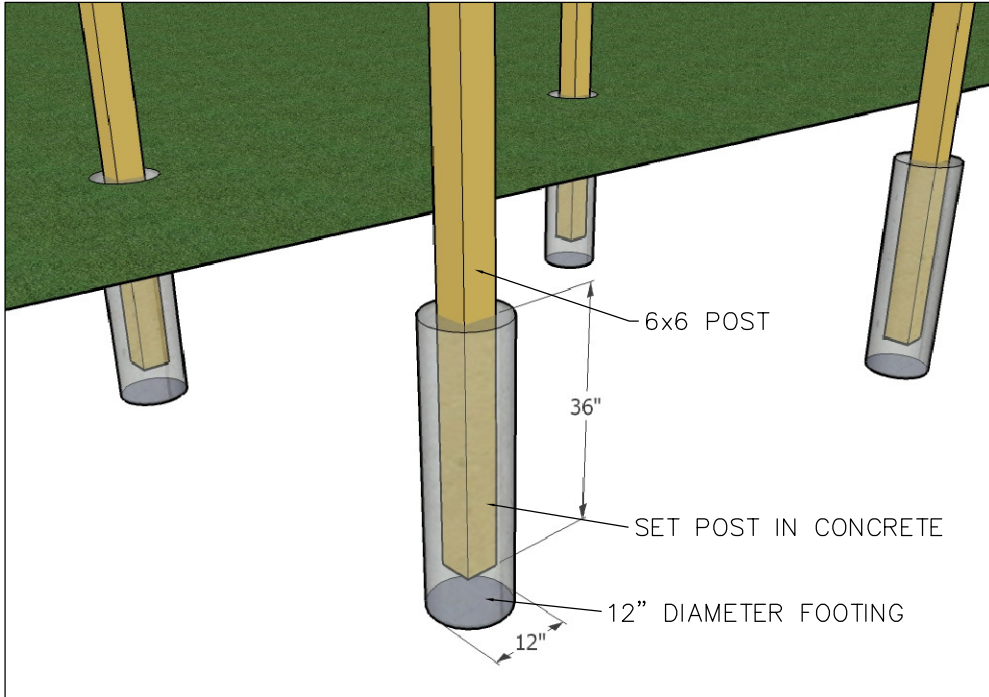

## HEADER CONNECTION / RAFTER PROFILE DETAIL

